

Get - Set Parameter list

Property Name as VT_BSTR or String	Properties ID as VT_I4 or Integer	varParameter	varValue	Type	Definition
VAR_FIELDS_ONLY	PROP_VAR_FIELDS_ONLY = 1			VT_BOOL	When this option is selected, the program sends all fixed label elements to the printer when printing is first launched. For subsequent printruns in a given series, only variable elements are sent.
DIRECT_THERMAL	PROP_DIRECT_THERMAL = 2			VT_BOOL	To enable if you are printing directly onto the print media. To disable if you are using an ink ribbon (thermal transfer).
RIBBON_SAVER	PROP_RIBBON_SAVER = 3			VT_BOOL	This option interrupts the ribbon advance when the label contains an area in which there is nothing to be printed.
PEEL_OFF	PROP_PEEL_OFF = 4			VT_BOOL	Enables the printer's peel-off function. This pauses the printer while the label is peeled off.
TEAR_OFF	PROP_TEAR_OFF = 5			VT_BOOL	Allows you to position the label to tear off in a predefined place.
ROT180	PROP_ROT180 = 6			VT_BOOL	The label is not modified but comes out of the printer rotated by 180°.
MIRROR	PROP_MIRROR = 7			VT_BOOL	Specifies whether printing should be carried out in mirror image. When this function is enabled, a mirror image of your document will be printed by inverting the horizontal coordinates.
CHECK_PRINTER	PROP_CHECK_PRINTER = 8			VT_BOOL	Allows to get the printer status.
OVERLAY_INVERTED	PROP_OVERLAY_INVERTED = 9			VT_BOOL	By default, placing a line on top of another object will not affect its appearance. Enabling this function inverts the color of the overlaid object (XOR function).
SUPPRESS_BACKFEED	PROP_SUPPRESS_BACKFEED = 10			VT_BOOL	This command deletes the withdrawal action of paper before printing when the printer is in Tear Off or Cutter mode.
CUTTER	PROP_CUTTER = 11			VT_BOOL	Allows to activate the cutter.
CUT_FINAL_PIECE	PROP_CUT_FINAL_PIECE = 12			VT_BOOL	With this option, only the last printed label is cut.
PrintSpeed	PROP_PRINTSPEED = 13			VT_I2	Allows to select the printer speed.
HeadTemp	PROP_HEADTEMP = 14			VT_I4	Allows to select the printing temperature.
PaperFeedMode	PROP_PAPERFEEDMODE = 15			VT_I2	Allows you to select a paper feed mode.
BackFeedPos	PROP_BACKFEEDPOS = 16			VT_I4	Allows you to select a paper feed mode.
VerticalPos	PROP_VERTICALPOS = 17			VT_I4	Allows you to enter the vertical adjustment value for all objects included in the label.
HorizontalPos	PROP_HORIZONTALPOS = 18			VT_I4	Allows you to enter the horizontal adjustment value for all objects included in the label.
FeedAfterPrint	PROP_FEEDAFTERPRINT = 19			VT_I4	Allows you to set the position of the media after printing the last label.
FeedBeforePrint	PROP_FEEDBEFOREPRINT = 20			VT_I4	Allows you to set the position of the media before printing the first label.
CutPos	PROP_CUTPOS = 21			VT_I4	Allows you to adjust the position of the media before it is cut
InterCut	PROP_INTERCUT = 22			VT_I4	Enter the number of labels you wish to print between each pause/cut.
CountryCode	PROP_COUNTRYCODE = 23			VT_I2	Allows you to configure international character sets. Select the country code corresponding to your system in order to manage the printer fonts correctly.
UseUnicode	PROP_USE_UNICODE = 26			VT_BOOL	Allows to send data to the printer in Unicode format