
MULTIPORT VALVE

The flow of water through a granular media filter is controlled by the Multiport Valve (MPV), which comes completely assembled and ready for operation.

The handle on top of the MPV can be moved to any of the slotted positions.

Valve Position	Function
FILTER	Normal filtration.
RINSE	Used after backwash to flush out remaining dirt.
BY-PASS	By-passes filter by circulating water to outlet.
BACKWASH	Cleans the filter media by reversing the flow.
WINTERIZE	Prevents rotor gasket sticking in freezing conditions.
(WASTE)	By-passes filter and sends water to waste.

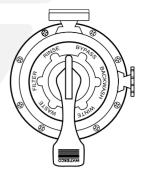

CAUTION:

- Do not adjust the handle position unless the inlet stop valve is closed or the pump is switched off.
- Do not apply excessive force to the handle. If the handle is difficult to depress, relieve the system's pressure first.

GENERAL MAINTENANCE

- Wash outside of the filter with a mild detergent and water. Rinse off with a hose. Do not use solvents to clean the filter. Solvents will damage the plastic components of the filter.
- Inspect the filter bed at least once a year. Remove any foreign material which has not been backwashed out of the system.

OFFICES - AUSTRALIA

NSW - Sydney (HEAD OFFICE) Tel: +61 2 9898 8686

VIC/ TAS - Melbourne Tel: +61 3 9764 1211

WA - Perth Tel: +61 8 9273 1900 QLD - Brisbane Tel : +61 7 3299 9900

SA/ NT - Adelaide Tel: +61 8 8244 6000 ACT Distributor

Tel: +61 2 6280 6476

OFFICES - OVERSEAS

Waterco (USA) Inc Phoenix, Arizona, USA Tel: +1 623 434 4703

Waterco USA Augusta, USA Tel: +1 706 793 7291

Waterco Canada Quebec, Canada Tel: +1 450 796 1421 Waterco (Europe) Limited Radfield, Kent, UK Tel: +44(0) 1795 521 733

Waterco (NZ) Limited Auckland, New Zealand Tel: +64 9 525 7570

Waterco (GZ) Limited Guangzhou, China Tel: +8620 3222 2180 Waterco (Far East) Limited Selangor, Malaysia Tel: +60.3 6145 6000

PT Waterco Indonesia Jakarta, Indonesia Tel: +62 21 4585 1481







